

## AQUAPAC Fit Guide - PDAs

Apple Blackberry Casio Dell Garmin Handspring HP NEC Palm Razor

Sony (Clie) Toshiba Treo

Make/Model	PDA Case
<b>Apple</b>	
Handspring Visor Edge	Classic or Wallet
Newton MessagePad 120	Classic Plus+
Palm m125	Classic or Wallet
<b>Blackberry</b>	
5810	Classic or Wallet
6710/6750/6210/6510	Classic or Wallet
RIM857/957	Classic or Wallet
<b>Casio</b>	
Cassiopeia E-10	Classic or Wallet
Cassiopeia E-100	Classic or Wallet
Cassiopeia E-11	Classic Plus+ or Classic
Cassiopeia E-115	Classic Plus+ or Wallet
Cassiopeia E-15	Classic or Wallet
Cassiopeia EM-500	Classic Plus+
Cassiopeia PA-2400W	Classic Plus+
Pocket Viewer PV-200	Classic or Wallet
Pocket Viewer PV400Plus	Classic or Wallet
<b>Dell</b>	
Axim x5 /x5 300MHz	Classic or Wallet
Axim X51/X51V	Classic or Wallet
<b>Garmin</b>	
iQue (3600)	Classic or Wallet
iQue M5	Classic or Wallet
<b>Handspring</b>	
Treo 180	Classic or Wallet (closed/flipped)
Treo 270	Classic or Wallet (closed/flipped)
Treo 300/600	Classic or Wallet (closed/flipped)
Treo 90	Classic or Wallet (closed/flipped)
Visor Delux	Classic or Wallet
Visor Edge	Classic or Wallet
Visor Neo	Classic or Wallet
Visor Platinum	Classic or Wallet
Visor Prism	Classic or Wallet
Visor Pro	Classic or Wallet
<b>HP (Hewlett Packard)</b>	
iPAQ™ H1910 pocket pc	Classic or Wallet
iPAQ™ H2210 pocket pc	Classic or Wallet
iPAQ™ HX2495 pocket PC	Classic or Wallet
iPAQ™ H3950 pocket pc	Classic or Wallet
iPAQ H4150 pocket pc	Classic or Wallet
iPAQ™ HX4700 pocket PC	Classic or Wallet
iPAQ™ H5450 pocket pc	Classic or Wallet
iPAQ™ H6500 pocket pc	Classic or Wallet
<b>NEC</b>	
MobilePro P300	Classic or Wallet
<b>Palm (Handheld)</b>	
I705	Classic or Wallet
III/IIIx/IIIc/IIIxe/IIIe	Classic or Wallet
LifeDrive	Classic or Wallet
M100	Classic or Wallet

## AQUAPAC Fit Guide - PDAs

Apple Blackberry Casio Dell Garmin Handspring HP NEC Palm Razor

Sony (Clie) Toshiba Treo

Make/Model	PDA Case
M105	Classic or Wallet
M125	Classic or Wallet
M500	Classic or Wallet
M505	Classic or Wallet
M515	Classic or Wallet
Pilot 5000	Classic or Wallet
Pilot Personal	Classic or Wallet
Pilot Professional	Classic or Wallet
Treo 700W	Classic or Wallet
Tungsten™ C	Classic or Wallet
Tungsten™ T	Classic or Wallet
Tungsten™ W	Classic or Wallet
Tungsten E2	Classic or Wallet
V/Vx	Classic or Wallet
VIIx/VII	Classic or Wallet
Zire™	Classic or Wallet
Zire™ 71	Classic or Wallet
Z22	Classic or Wallet
<b>Razor</b>	
Zayo A600	Classic or Wallet
<b>Sony (Clie)</b>	
P800	Classic or Wallet
PEG-NR70V	Classic or Wallet (closed/flipped)
PEG-NX60	Classic or Wallet (closed/flipped)
PEG-NX70V	Classic or Wallet (closed/flipped)
PEG-NZ90	Classic or Wallet (closed/flipped)
PEG-SJ20	Classic or Wallet (closed/flipped)
PEG-SJ22	Classic or Wallet (closed/flipped)
PEG-SJ30	Classic or Wallet (closed/flipped)
PEG-SJ33	Classic or Wallet (closed/flipped)
PEG-SL10	Classic or Wallet (closed/flipped)
PEG-T675C	Classic or Wallet (closed/flipped)
PEG-TG50	Classic or Wallet (closed/flipped)
<b>Toshiba</b>	
E310	Classic or Wallet
E330	Classic or Wallet
E335	Classic or Wallet
E350	Classic or Wallet
E740	Classic or Wallet
E740	Classic or Wallet
E750/ E755	Classic or Wallet
<b>Treo</b>	
Palm 600	Classic or Wallet